

American Retail Supply Assembly Instructions

Garment Racks - 428201, 428200, 428205, 428206, 428203, 428204



Parts List

1	Allen Wrench
2	2" Hex Screws- already in adjustable frame (will have to be removed when assembling)
2	Lock Washers
1	Base
1	Black Plate - 14 3/4" x 12"
1	Chrome Overplate 15" x 12 1/4"
1	Protective plate - 3" x 5"
1	Upright - 45"

1. Place Chrome overplate on the Black base. Place protective plate on top of overplate. Line up holes.
2. Remove Screw and lock washer from bottom of upright.
3. Put upright on top of Protective plate. Line up holes.
4. Turn upside down and screw in 2" Hex Screws and lock washers.
5. The arm pieces have a push-button adjuster; orient these so the push-button will match up with the adjustment holes, insert into the uprights from the top. The push-button will click into adjustment holes; to reposition, press button and move arm up or down to another height. Each arm can be set at a different height if desired.
6. Adjust arms to height desired.