
Components and Assembly Instructions

"H" STYLE SLAT WALL DISPLAY

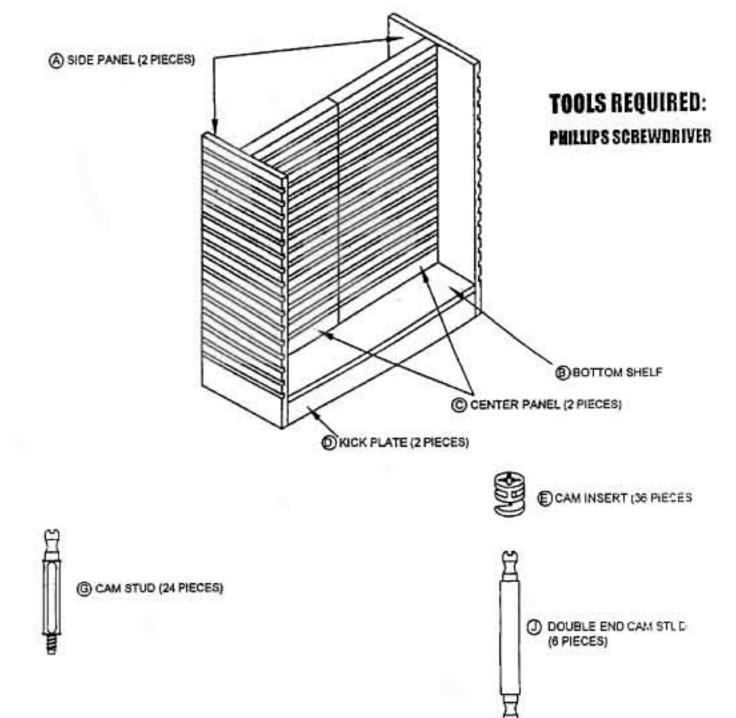


(1)

Step 1.

Lay Side Panel "A" on flat surface with holes facing upward.

Insert 12 Cam Studs "G" Into holes shown, making sure that threaded end of the stud is entered into holes up to the shoulder.

Repeat for other Side Panel "A" (Fig. 1)

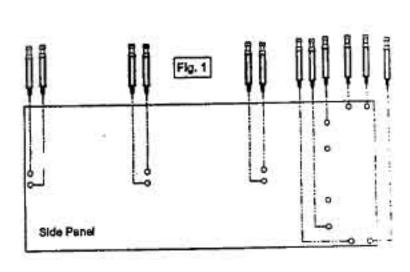



Step 2.

Insert 6 Cam Inserts "E" into holes shown on each side of the Center Panel "C", making sure the arrow is pointing towards the adjacent holes that accepts the Cam Studs (see Fig. 3).

Repeat for other Center Panel "C". Insert 6 Double End Cam Studs "J" into

holes provided in the end of one Center Panel as shown in (Fig 2). Lock the 3 Cam Inserts "E" on each side of Center Panel that correspond with the 3 Double End Cam Studs "J" by turning clockwise approximately one-quarter turn until tight.

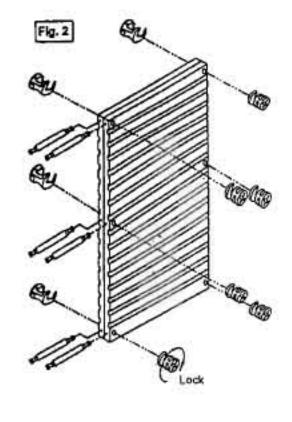

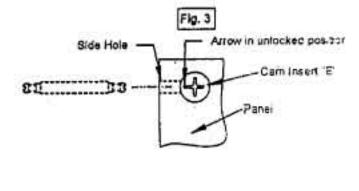


RETAIL SUPPLY (800) 426-5708 • www.MakeYouHappy.com Packaging • Display • Price Marking Inventory Control • Promotional Products

(2)

End Vlew

Step 3. Insert four Cam Inserts "E" as shown and two Cam Studs "J" in each end of

Bottom Shelf. (Fig 4). Insert four Cam Inserts "E" as shown in both Kick Plates "D". (Fig 5).

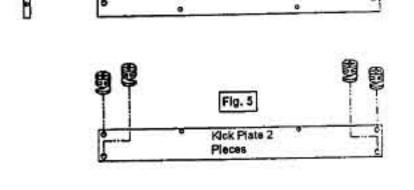

Bottom Shelf

Assemble Right Center Panel to Right

Step 4. (See Fig. 6)

Inserts. Assemble Left Center Panel to Right Center Panel. Lock Cam Inserts.

Side Panel with Double End Cam Studs "J" facing upward. Lock Cam

With Cam Inserts "E" facing bottom

side of Bottom Shelf, assemble Bottom Shelf to Right Side Panel. Lock Cam Inserts.

With Cam Inserts "E" facing inside, assemble both Kick Plates to Right Side Panel, Lock Cams.

Assemble Left Side Panel, Lock ALL Cam Inserts.

